










 






Cipherlab 1070

[Configuration Sheet]



Barcode	Function
	Enter Configuration Mode
	Restore Default Settings
	Activate Keyboard Type
	Type 7 (PC/AT UK)
	Type 0 (PC/AT UK)
	Validate
	Add Prefix Character
	Hex 7
	Hex E
	Validate
	Enable automatic double scans (ensures reading accuracy)
	Inter-character delay
	2 (20 milliseconds)
	0
	Validate
	Exit & Save (You MUST scan this to finish)